


ATTENTION NOTICE

Please read carefully the instruction before using.
Follow the installation step by step.
For additional information please visit our web site at:
www.metalia.ca

REQUIRED TOOLS

- Drill
- Key or ratchet $\frac{7}{16}$ "
- level

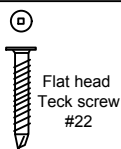

- 1 A- Install the 3 columns support on the top by using teckscrew # 11 make sure they are perfectly vertical. one in the middle and the others at the end of the work surface top.
- B- Install the "U" shape support on the top, put the longest flange at the back (see details #1)
- C- Install the Stainless steel backing in the "U" shape and then use flat head teckscrew # 22 at each top corner , directly in the columns support (see details # 2).
- D- Make sure that the entire system is PERFECTLY leveled.



Columns support
MW-1243-ZZ



Details # 2

